


REV	DATE	DESCRIPTION OF CHANGE	APP

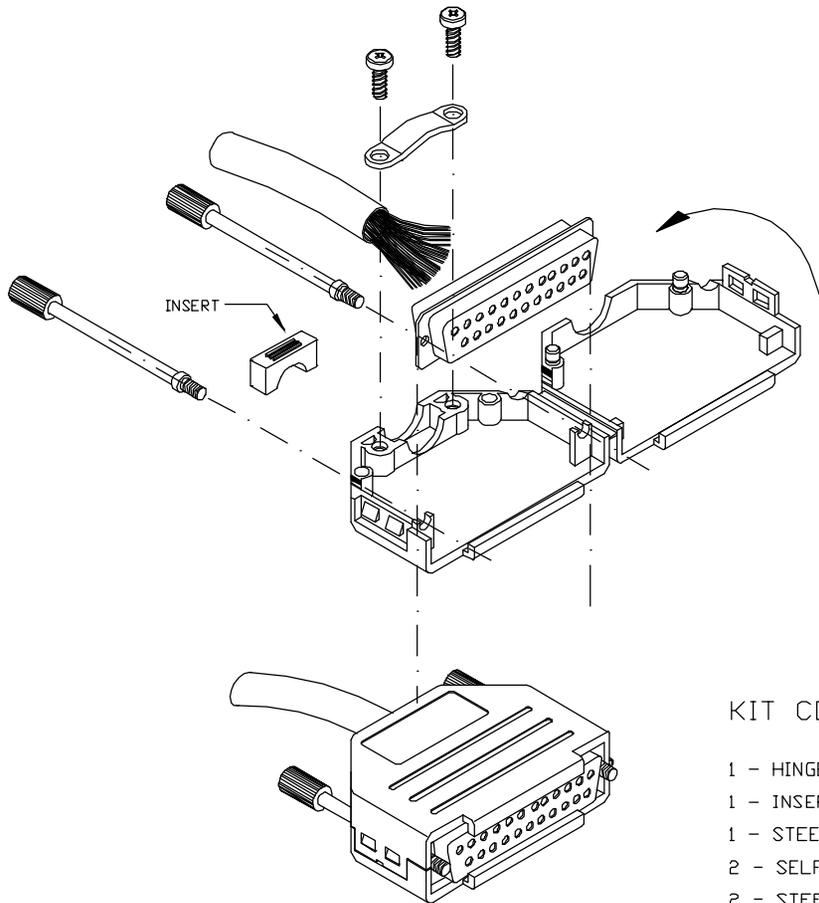

ASSEMBLY NOTES:

1. USE INSERT IF REQUIRED BY PLACING INTO REAR SLOT OF COVER. THE INSERT MAY BE PLACED IN TWO WAYS (FACE UP OR FACE DOWN) DEPENDING ON CABLE DIAMETER. INSERT MAY BE LEFT OUT FOR LARGER CABLE DIAMETERS.
2. PLACE CABLE JACKET AND CONNECTOR INTO THEIR APPROPRIATE PLACE.
3. POSITION STEEL CLAMP OVER CABLE, INSERT AND TIGHTEN SCREWS.
4. PUT THUMBSCREWS IN PLACE AND CLOSE THE COVER UNTIL THE TWO HALVES SNAP TOGETHER.

KIT CONSISTS OF:

- 1 - HINGED COVER
- 1 - INSERT
- 1 - STEEL CLAMP
- 2 - SELF-TAPPING SCREWS
- 2 - STEEL THUMBSCREWS.

DESCRIPTION: ASSEMBLY INSTRUCTIONS FOR HINGED PLASTIC COVER (MH)

APPROVALS	DATE
DRN: L.C.	03-OCT-95
CHK'D: JSD	03-OCT-95
DESIGN:	
TOLERANCES:	N/A

Northern Technologies

DWG NO: 0002-080-037

SCALE: SHEET: 1 OF 1