


# Engineering Note: Photographic Assembly Reference

Part Number/s: N30E950000 & NA30E950000

There is no assembly note for this cover as it is fairly straight forward.

You can use an arbor press or vice grips to clamp the staple into the cover. If using a vice grip, be sure to place some form of media over bottom of the exposed cover portion to prevent it from being damaged.

Here are some reference pictures showing: Arbor Press, Clamp engaged in slot as well as the cable terminated with the clamp pressed into position.

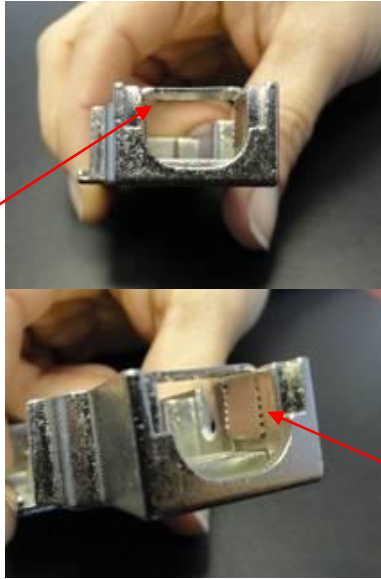

**FOR REFERENCE ONLY**  
Photographs of staple engaged in strain relief cavity using Arbor press or standard vice-grip wrench.



View showing assembly after staple is clamped into strain relief cavity.

